Rhythm Rockers

OWNER'S MANUAL — Please read before using this equipment.

Who's got the beat? You do! Create your personal percussion sound!

March to the beat of a different drum — to the beat you create yourself with your RadioShack Rhythm Rockers! You can create your own fabulous percussion sounds or listen to the demo.

INSTALLING BATTERIES

Your Rhythm Rockers require one 9V battery (not supplied) for power. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Caution: Use only a fresh battery of the required size and recommended type.

Follow these steps to install batteries.

1. Use a flat blade screwdriver to lift up the battery compartment cover.

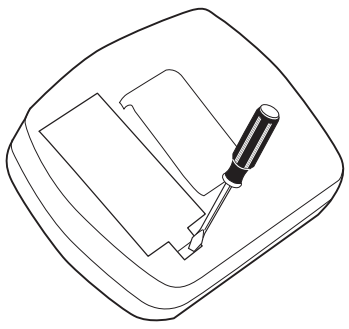

Note: The battery compartment cover is hinged. Do not try to remove it.

2. Snap the battery to the appropriate terminals. The battery fits only one way. Do not force it.

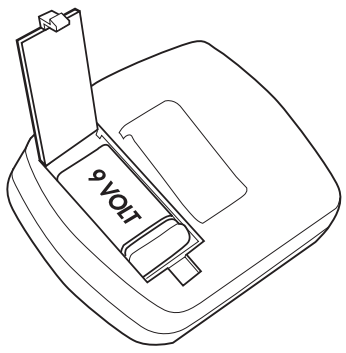

3. Place the connected battery in the compartment.
4. Replace the cover and press it down until it snaps.

When the sound becomes weak or distorted or the Rhythm Rockers stop operating properly, replace the battery.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the Rhythm Rockers for a week or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

USING THE RHYTHM ROCKER

1. Use the belt clip to attach the speaker/light box to your clothing. Turn **VOLUME ON/OFF** to **ON**.
2. Swing the drum sticks and you can hear drum sounds and see flashing lights. You can make different drum sounds by pressing or releasing the yellow buttons on the sticks.

   Press one or both buttons. See how many different sounds you can make!

   Note: Press the auto-play button on the speaker/light box while it is turned on to hear a demo drum rhythm.
3. Rotate **VOLUME ON/OFF** clockwise or counterclockwise to adjust the sound to the desired listening level.
4. When you are finished playing with the Rhythm Rockers, rotate **VOLUME ON/OFF** to **OFF**.

CARE

Keep the Rhythm Rockers dry; if they get wet, wipe them dry immediately. Use and store the Rhythm Rockers only in normal temperature environments. Handle the Rhythm Rockers carefully; do not drop them. Keep the Rhythm Rockers away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Rhythm Rockers's internal components can cause a malfunction and invalidate its warranty. If your Rhythm Rockers are not performing as they should, take them to your local RadioShack store for assistance.

© 2000 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

RadioShack®
www.radioshack.com℠

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

60-2767
06A00
Printed in Hong Kong